





ADA BRACKET INSTALL

ADA Vanity Mounting

1. Mount ADA Brackets to the wall securing it to meet local building code required loading requirements for the vanity from edge.
2. Locate the wall studs and hold the bracket directly over stud at the desired height. (Brackets must be installed into wall studs. Drywall anchors should not be used)
3. Mark on the wall the locations of the holes to be drilled, set the bracket aside.
4. Drill 3/16" pilot holes on the marked locations. Place bracket back into position and secure with 1/4" lag bolts. (not supplied) Check for level and shim if necessary.
5. Apply a silicone sealant to the top of the brackets to secure the counter surface to the brackets.

NOTE: Double Studs or metal mounting plates are recommended for stronger installation

NOTE: Use ADA bowls when using the ADA Brackets.

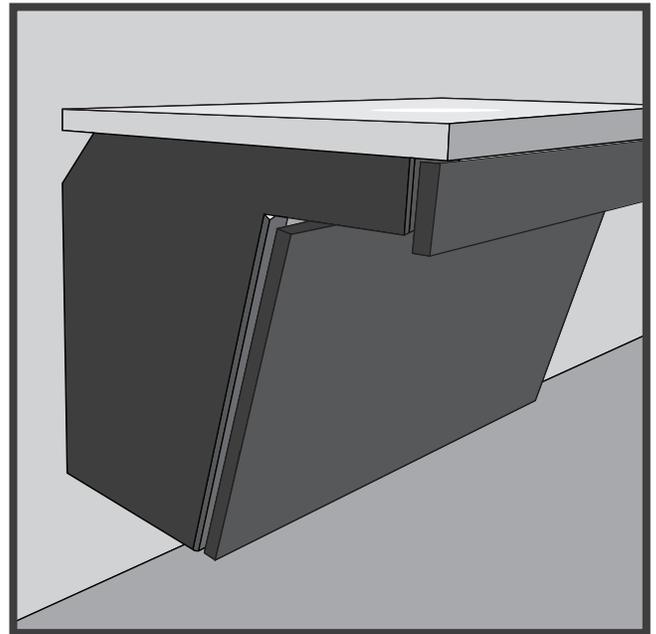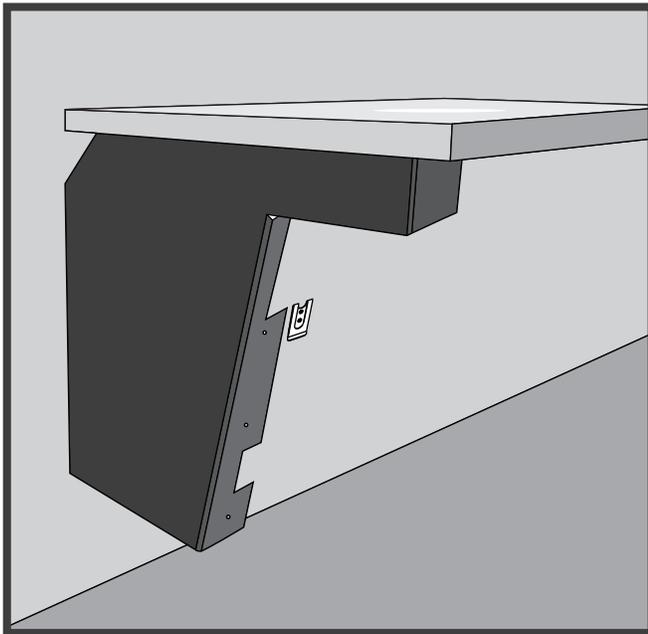

A&M **HARDWARE, INC.**

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552 | Fax: (717) 653-5874

www.AandMhardware.com