


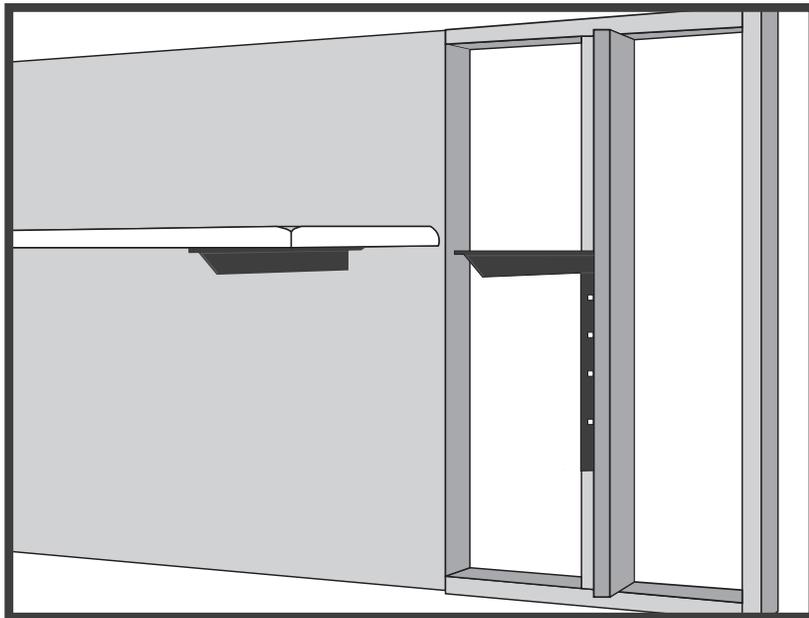

HYBRID BRACKET INSTALL

Hybrid Bracket Concealed Install

1. Select the appropriate size bracket for your counter surface. The overhang should be a maximum of 6" longer than the bracket.
2. For installation on a finished wall, first remove the wall covering in the area where the bracket is to be installed to gain access to the studs. For new construction proceed to Step 3.
3. Rip a 2x4 and attach to the side of the vertical wood stud.
4. Mark on the ripped 2x4 the locations of the .holes to be drilled, set the bracket aside.
5. Drill 3/16" pilot holes on the marked locations. Place bracket back into position and secure with 1/4" lag bolts.
6. Check for level and shim if necessary.
7. Repeat for additional brackets. Brackets should be placed every 16 to 24" for optimum performance. Install/patch drywall or other wall covering around installation area.
8. Apply a silicone sealant to the top of the brackets to secure the counter surface to the brackets.



A&M

HARDWARE, INC.

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552 | Fax: (717) 653-5874

www.AandMhardware.com