




C/EC BRACKET INSTALL

Concealed / Extended Concealed Bracket Install

1. Select the appropriate size bracket for your counter surface. The overhang should be maximum of 6" longer than the bracket and a minimum of 3" to reduce visibility.
2. The Concealed Bracket is designed to attached to vertical wood studs behind drywall or other wall covering. For installation on a finished wall, first remove the wall covering in the area where the bracket is to be installed to gain access to the studs. For new construction, proceed to Step 3.
3. Place the bracket to the right of the stud at the desired height, flush with the surface of the stud, check for level and mark on the stud for each hole to be drilled.
4. Drill a 3/8" hole through entire stud at the locations marked.
5. Place bracket back into position and secure with supplied 3/8"-16 x 3" carriage bolts.
6. Repeat for additional brackets. Brackets should be placed every 16 to 24" for optimum performance. Install/patch drywall or other wall covering around installation area.
7. Apply a silicone sealant to the top of the brackets to secure them to the underside of the counter surface.

NOTE: Recommend wood backing when used with metal studs.

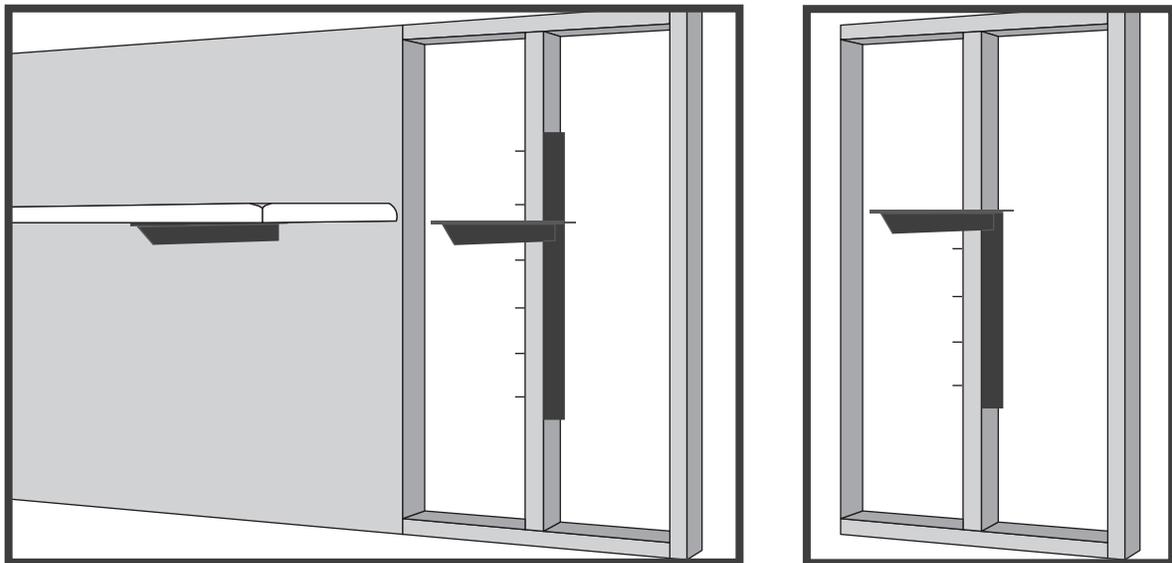

A&M

HARDWARE, INC.

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552 | Fax: (717) 653-5874

www.AandMhardware.com